

| アジャストボルト | a(アジャスト調整量) | h1 | h2 |
|----------|-------------|-----|-----|
| M16×100 | 25 | 75 | 200 |
| M16×150 | 50 | 100 | 200 |
| M16×200 | 70 | 120 | 220 |

※ 指示がない場合は±25が標準です

| MMX2-SD2 | | MMX200-SD2 | | MMX224-SD2 | | MFB-SD2 | |
|----------|------|------------|------|------------|------|---------|------|
| 機高(mm) | | 機高(mm) | | 機高(mm) | | 機高(mm) | |
| min | max | min | max | min | max | min | max |
| 485 | 1000 | 495 | 1000 | 510 | 1000 | 520 | 1000 |

| MMX2-SD2P | | MMX200-SD2P | | MMX224-SD2P | | MFB-SD2P | |
|-----------|------|-------------|------|-------------|------|----------|------|
| 機高(mm) | | 機高(mm) | | 機高(mm) | | 機高(mm) | |
| min | max | min | max | min | max | min | max |
| 525 | 1000 | 540 | 1000 | 550 | 1000 | 535 | 1000 |

※ 最低機高はステーパイプの取付、ステー高さ、原動高さを考慮せず
アジャストボルトM16×100を使用した場合の脚からフレームの高さです
SD2P寸法表

| ベルト幅 | 50 | 75 | 100 | 150 | 200 | 250 | 300 | 400 | 500 | 600 |
|------|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| W1 | | 350 | | | 400 | 450 | 550 | 650 | 750 | |

※ ベルト幅 50 はMMX2, MMX200, MMX224のみの設定です
※ ベルト幅 600 はMMX224のみの設定です

